 

 



 
 
 
 
 








 




 





Original	Replacement	Original	Replacement
	Power		Power
	[≡?]		Dual
	[≡◆]/[+]/Wide		3D
	[≡i]/Guide		Guide
	[i]/Info		Info
	[≡o]		Subt
	[≡+]/[X]		Format
	[≡x]/[⋯]		Options
	[/≡]/[*]		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PP		Pre Ch
	[≡]		Text
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P/CH+		Ch +
	P/CH-		Ch -
	P<P/Swap		Back
	TV/DTV		TV/R
	AV/Source		AV
	Menu		Menu
	-/--		Shift + Guide
	Exit		Exit
	Up		Up
	Down		Down





Original	Replacement	Original	Replacement
 Right	 Right		
 Left	 Left		
 OK/Select	 Ok		
 Red/↑	 Red		
 Green/↓	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

