



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Select		Ok
	M		Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Exit		Exit
	P<P/Swap		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	PP		Eject
	I-II		Dual
	Tv/DTV		TV/R
	[≡]		Text
	[≡0]		Options
	AV/Source		AV
	[≡+]/[X]		Format
	[≡X]/[■]		3D
	[.≡]/[■]		Subt





Original	Replacement	Original	Replacement
 [≡◇]	 MEDIA Media		
 [≡?]	 RETURN BACK Back		
 [≡i]	 DISPLAY INFO Info		
 Red/[+]/Wide/↑	 A Red		
 Green/↓	 B Green		
 Yellow	 C Yellow		
 Blue/Guide	 D Blue		
 [i]	 E-MANUAL D.MENU D. Menu		

