





 
 
 

 
 



 

 

 


 












Original	Replacement
 Power	 Power
 TV	 Picture / Format
 Back	 Back / Return
 Menu	 Menu / Home
 Up	 Up
 Left	 Left
 Ok	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Stop	 Stop / Hold
 Smart Tv	 Smart / List
 Skip Prev.	 I<< / Preset-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Skip Next	 >>I / Preset+
 Ch+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 Vol+	 Vol+
 Ch-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue/00/Lang.	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer
 Rec	 Rec / Rec Mode
 Source	 AV / Input / RDS
 Option	 Setup / OPT /
 Subt.	 Subtitle / EQ
 IPTV	 Display / Media
 Eco / Search	 Fav / Marker / PC
 Guide-Popup	 Guide / EPG / -/-
 Ch.List	 Shift + Smart / List
 Info	 Info / Angle





Original	Replacement
	 Power
	 TV/Radio /
	 Back / Return
	 Menu / Home
	 Up
	 Left
	 OK
	 Right
	 Down
	 Exit / Cancel / Clear
	 Stop / Hold
	 Smart / List
	 I<< / Preset-
	 Play / Slow
	 Pause / Step / Freeze
	 >>I / Preset+
	 CH+ / Page+

Original	Replacement
	 Vol-
	 Vol+
	 CH- / Page-
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Mute / Dimmer
	 Rec / Rec Mode
	 AV / Input / RDS
	 Setup / OPT /
	 Subtitle / EQ
	 Display / Media
	 Fav / Marker / PC
	 Guide / EPG / -/--
	 Shift + Smart / List
	 Info / Angle



