

 




Original	Replacement	Original	Replacement
	Power		Power
			Picture / Format
	Back		Back / Return
	Menu		Menu / Home
	Up		Up
	Left		Left
	Ok		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Stop		Stop / Hold
	Smart Tv		Smart / List
	Skip Prev.		I<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Skip Next		>>I / Preset+
	Ch+		CH+ / Page+
	Vol-		Vol-
	Vol+		Vol+
	Ch-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue/00/Lang.		Blue / Prime Video / Random
	Mute		Mute / Dimmer
	Rec		Rec / Rec Mode
	Source		AV / Input / RDS
	Option		Setup / OPT /
	Subt.		Subtitle / EQ
	IPTV		Display / Media
	Eco / Search		Fav / Marker / PC
	Guide-Popup		Guide / EPG / -/-
	Ch.List		Shift + Smart / List
	Info		Info / Angle










 
 
 
 





 
 









Original	Replacement
1 / 1	TV 1
2 ARC	DVD 2
3 DEF	CD - STB 3
4 CH	VIDEO 4
5 INL	TAPE 5
6 MNO	TUNER 6
7 PORS	AUX - HDD 7
8 TUV	USB 8
9 WXYZ	BLUETOOTH 9
DISC MENU	TOP MENU D.MENU D.Menu / Top
0 .	HDMI - BAT 0
TEXT MEDIA CENTER	GOTO TEXT Text / Goto
SOUND	TITLE SOUND Sound / Title
	SIZE ZOOM Zoom / Size
REPEAT	SHIFT + APP Repeat Shift + Green / APP /

Original	Replacement





Original	Replacement
	 Power
	 TV/Radio /
	 Back / Return
	 Menu / Home
	 Up
	 Left
	 OK
	 Right
	 Down
	 Exit / Cancel / Clear
	 Stop / Hold
	 Smart / List
	 I<< / Preset-
	 Play / Slow
	 Pause / Step / Freeze
	 >>I / Preset+
	 CH+ / Page+

Original	Replacement
	 Vol-
	 Vol+
	 CH- / Page-
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Mute / Dimmer
	 Rec / Rec Mode
	 AV / Input / RDS
	 Setup / OPT /
	 Subtitle / EQ
	 Display / Media
	 Fav / Marker / PC
	 Guide / EPG / -/-
	 Shift + Smart / List
	 Info / Angle





Original	Replacement
1	TV 1
2	DVD 2
3 DEF	CD - STB 3
4 DISC	VIDEO 4
5 INCL	TAPE 5
6 MNO	TUNER 6
7 PPRS	AUX - HDD 7
8 TVV	USB 8
9 WXYZ	BLUETOOTH 9
DISC MENU	TOP MENU D.MENU
0	HDMI - BAT 0
TEXT MEDIA CENTER	GOTO TEXT
SOUND	TITLE SOUND
← ↑ ↓ →	SIZE ZOOM
REPEAT	SHIFT + APP REPEAT

Original	Replacement

