



Original	Replacement	Original	Replacement
Power	Power	Mute	Mute / Dimmer
Tv/AV	AV / Input / RDS	Vol-	Vol-
1	1	Up	Up
2	2	CH+	CH+ / Page+
3	3	Vol+	Vol+
Eject	Eject / Surround	Left	Left
4	4	OK	OK
5	5	Right	Right
6	6	Sys Menu	D.Menu / Top
Play/Pause	Play / Slow	CH-	CH- / Page-
7	7	Down	Down
8	8	Display	Display / Media
9	9	Picture	Picture / Format
Stop	Stop / Hold	Sound	Sound / Title
0	0	Timer	Sleep / Timer
-/--	Shift + Guide / EPG / -/--	Nicam/A2	Audio / Lang I/II
Return	Back / Return	Lan/Prog-	Shift + CH- / Page-





Original	Replacement
Zoom/Prog+	Shift + CH+ /
Sub	Subtitle / EQ
Goto	Text / Goto
SET/Tv/TXT/DVB-	Setup / OPT /
Menu/Cancel/Tv Format	Menu / Home
ANG/Reveal/Exit	Exit / Cancel / Clear
Title/info	Shift + Sound / Title
<</Hold/Languag	<< / Tune-
>>/Size/Text	>> / Tune+
<</Subpage	<< / Preset-
FAV	Fav / Marker / PC
>> /Index	>> / Preset+
EPG	Guide / EPG / -/--
Red/Pro	Red / Netflix / Search
Tv/Radio	TV/Radio /
Green/Slow/Audio	Green / APP / Repeat
Yellow/Rep/Freeze	Yellow / YouTube / Repeat

Original	Replacement
Blue/A-B/Subtitle	Blue / Prime Video / Random

