
 

 


 








Original		Replacement		Original		Replacement	
	Power		Power		Exit		Exit
	TV/AV		AV		Vol+		Vol +
	TV/TXT		Text		Vol-		Vol -
	Cancel		Media		Channel List		List
	Reveal		D. Menu		Mute		Mute
	DTV		Smart		EPG		Guide
	Hold		Options		Info		Info
	Size		Format		Up		Up
	Subpage		Shift + Subt		Down		Down
	Index		Shift + Info		Right		Right
	Red		Red		Left		Left
	Green		Green		OK		Ok
	Yellow		Yellow		1		1
	Blue		Blue		2		2
	CH+		Ch +		3		3
	CH-		Ch -		4		4
	Menu		Menu		5		5





Original	Replacement
	6
	7
	8
	9
	0
	FAV
	SHIFT + PICTURE FORMAT
	RETURN BACK
	SOUND DUAL
	PROG SLEEP
	ZOOM Eject
	AD SUBT
	SEARCH TV/R
	<<
	>>
	SHIFT + REPEAT TEXT
	I<<

Original	Replacement
	>>I
	PLAY MODE Play
	Pause
	ECO 3D

