



















































 





Original	Replacement	Original	Replacement
	Power		Power
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	TV/SAT		AV / Input / RDS
	TV/Radio		TV/Radio /
	Zoom		Zoom / Size
	List		Smart / List
	Audio		Audio / Lang I/II
	EPG		Guide / EPG / -/--
	Timer		Sleep / Timer
	Text		Text / Goto
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	M/P		Display / Media
	Mute		Mute / Dimmer

Original	Replacement	Original	Replacement
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Vol+		Vol+
	Vol-		Vol-
	Recall		Back / Return
	P+		>>  / Preset+
	P-		<< / Preset-
	FAV		Fav / Marker / PC
	1		1
	2		2
	3		3
	4		4





	Original	Replacement	Original	Replacement
5	5	TAPE 5		
6	6	TUNER 6		
7	7	AUX - HDD 7		
8	8	USB 8		
9	9	BLUETOOTH 9		
0	0	HDMI - BAT 0		
INFO	Info	ANGLE INFO		
PAUSE	Pause	STEP - FREEZE 		





Original	Replacement
 Power	 Power
 SAT	 Smart / List
 Info	 Info / Angle
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / Zoom	 Zoom / Size
 0 / Zoom	 0
 Audio	 Audio / Lang / I/I
 Mute	 Mute / Dimmer
 Recall	 Back / Return

Original	Replacement
 FAV	 Fav / Marker / PC
 Up / CH+	 CH+ / Page+
 Down / CH-	 Down
 Up / CH+	 Up
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 Down / CH-	 CH- / Page-
 Left / Vol-	 Vol-
 Left / Vol-	 Left
 OK	 OK
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Blue / Pause	 Blue / Prime Video / Random
 Blue / Pause	 Pause / Step / Freeze
 Red / Text	 Red / Netflix / Search
 Red / Text	 Text / Goto
 Multivideo	 Display / Media








 
























 


 








 

























 


 

Original	Replacement
Yellow / Subtitle	Yellow / YouTube / Repeat
Yellow / Subtitle	Subtitle / EQ
TV / AV	AV / Input / RDS
Green / P/N	Green / APP / Repeat
TV / Radio	TV/Radio /
SAT	Shift + 0
EPG	Guide / EPG / -/--

Original	Replacement





Original	Replacement	Original	Replacement
Mute	 Mute / Dimmer	Menu Down	 Down
PWR On/Off	 Power	Back	 Back / Return
App	 +  Shift + Green / APP /	Volume+	 Vol+
Epg	 Guide / EPG / -/--	CH/Page+	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Subt.List	 Subtitle / EQ	CH/Page-	 CH- / Page-
TV	 TV/Radio /	Audio	 Audio / Lang I/II
Text	 Text / Goto	1. ?	 1
Zoom	 Zoom / Size	2abc	 2
Menu	 Menu / Home	3def	 3
TV/SAT	 AV / Input / RDS	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Display / Media	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 +  Shift + Guide / EPG / -/--

Original	Replacement	Original	Replacement
Mute	 Mute / Dimmer	Menu Down	 Down
PWR On/Off	 Power	Back	 Back / Return
App	 +  Shift + Green / APP /	Volume+	 Vol+
Epg	 Guide / EPG / -/--	CH/Page+	 CH+ / Page+
Info	 Info / Angle	Volume-	 Vol-
Subt.List	 Subtitle / EQ	CH/Page-	 CH- / Page-
TV	 TV/Radio /	Audio	 Audio / Lang I/II
Text	 Text / Goto	1. ?	 1
Zoom	 Zoom / Size	2abc	 2
Menu	 Menu / Home	3def	 3
TV/SAT	 AV / Input / RDS	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Display / Media	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 +  Shift + Guide / EPG / -/--

























































Original	Replacement	Original	Replacement
0/10	0		
FAV Pref.	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Dec/Pause	Pause / Step / Freeze		
	Smart / List		
	D.Menu / Top		











Original	Replacement	Original	Replacement
Power	 Power	Recall	 Back / Return
Mute	 Mute / Dimmer	Vol+	 Vol+
Pause	 Pause / Step / Freeze	List	 Smart / List
Audio	 Audio / Lang I/II	P+	 CH+ / Page+
Zoom	 Zoom / Size	Vol-	 Vol-
Timer	 Sleep / Timer	M/P	 Display / Media
Tv/Radio	 TV/Radio /	P-	 CH- / Page-
Text	 Text / Goto	1	 1
Tv/SAT	 AV / Input / RDS	2	 2
Menu	 Menu / Home	3	 3
Up/CH+	 Up	4	 4
Info	 Info / Angle	5	 5
Left	 Left	6	 6
OK	 OK	7	 7
Right	 Right	8	 8
Exit	 Exit / Cancel / Clear	9	 9
Down/CH-	 Down	EPG	 Guide / EPG / -/-

Original	Replacement	Original	Replacement
Power	 Power	Recall	 Back / Return
Mute	 Mute / Dimmer	Vol+	 Vol+
Pause	 Pause / Step / Freeze	List	 Smart / List
Audio	 Audio / Lang I/II	P+	 CH+ / Page+
Zoom	 Zoom / Size	Vol-	 Vol-
Timer	 Sleep / Timer	M/P	 Display / Media
Tv/Radio	 TV/Radio /	P-	 CH- / Page-
Text	 Text / Goto	1	 1
Tv/SAT	 AV / Input / RDS	2	 2
Menu	 Menu / Home	3	 3
Up/CH+	 Up	4	 4
Info	 Info / Angle	5	 5
Left	 Left	6	 6
OK	 OK	7	 7
Right	 Right	8	 8
Exit	 Exit / Cancel / Clear	9	 9
Down/CH-	 Down	EPG	 Guide / EPG / -/-





Original	Replacement		
0/Sleeptimer		0	
FAV		Fav / Marker / PC	
Red		Red / Netflix / Search	
Green		Green / APP / Repeat	
Yellow		Yellow / YouTube / Repeat	
Blue		Blue / Prime Video / Random	

Original	Replacement		

