









Original	Replacement
Power	Power
TV / Video	AV
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
/--	GUIDE
Quick	Pre Ch
Mute	Mute
Sleep	Sleep
Skip	Exit

Original	Replacement
Display	Info
Up / Prog +	Ch +
Up / Prog +	Up
Down / Prog -	Ch -
Down / Prog -	Down
Right / Vol +	Vol +
Right / Vol +	Right
Left / Vol -	Vol -
Left / Vol -	Left
Menu	Menu
Menu	Ok
P-STD	Shift + Format
S-STD	Dual
PC Auto ADJ	Smart
PC / TV/PC	Media
M / S	TV/R
Surround	Shift + Dual





Original	Replacement
 Wide	 Format
 OSD Position	 3D
 OSD Language	 Shift + 3D
 Setup	 Options
 Red	 Red
 Green	 Green
 List / FLOF	 List
 Yellow	 Yellow
 Blue	 Blue
 Mix	 Shift + Text
 Index	 Shift + Info
 TV / Text	 Text
 Cancel	 Back
 Subpage	 Subt
 Reveal	 Play
 Page -	 I<<
 Page +	 >>I

Original	Replacement
 Size	 Eject
 Hold	 Stop
 Store	 Shift + Smart

