



 

 





 

 
 
 

 

 

 















Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Tv/Radio	 TV/Radio /
 0	 0
 ←PR	 Back / Return
 EPG	 Guide / EPG / -/--
 Up	 Up
 PR+	 CH+ / Page+

Original	Replacement
 Menu	 Menu / Home
 Vol-	 Vol-
 Left	 Left
 OK/List	 OK
 Right	 Right
 Vol+	 Vol+
 Info	 Info / Angle
 PR-	 CH- / Page-
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Audio	 Audio / Lang I/II
 ↑	 >> / Tune+
 Yellow	 Yellow / YouTube / Repeat
 [...]	 Subtitle / EQ
 ↓	 << / Tune-
 Blue	 Blue / Prime Video / Random





Original		Replacement		Original		Replacement	
	Audio L/R		Setup / OPT /				
	TXT		Text / Goto				
	Green		Green / APP / Repeat				
	Pause		Pause / Step / Freeze				
	[+]		Zoom / Size				
	FAV		Fav / Marker / PC				
	UHF		Smart / List				
	PAL/NTSC		Picture / Format				
	TV/AV		AV / Input / RDS				

