

 

 

 

 

 

 







 

 

 

 





 



 

 



 



 



















 



 

 


 

 
 

 

 

 















Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep / Timer
	Mute		Mute / Dimmer
	Mode		AV / Input / RDS
	1		1
	2		2
	3		3
	Eject/Nicam2		Eject / Surround
	Eject/Nicam2		Sound / Title
	4		4
	5		5
	6		6
	TXT/MIX		Text / Goto
	Play/Pause		Play / Slow
	Play/Pause		Pause / Step / Freeze
	7		7
	8		8
	9		9
	Stop/Exit/Cancel		Exit / Cancel / Clear
	Stop/Exit/Cancel		Stop / Hold
	-/--		Guide / EPG / -/--
	0		0
	Back		Back / Return
	SYS Menu		Menu / Home
	Rec		Rec / Rec Mode
	Up		Up
	CH+		CH+ / Page+
	DTV/Radio		TV/Radio /
	Left		Left
	Enter		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	CH-		CH- / Page-





Original	Replacement
 Vol+	 Vol+
 Return	 Shift + Back / Return
 Menu DVD	 D.Menu / Top
 Setup	 Setup / OPT /
 Display	 Display / Media
 Search/FAV	 Shift + Red / Netflix /
 Search/FAV	 Fav / Marker / PC
 Slow/EPG	 Shift + Play /
 Slow/EPG	 Shift + Guide / EPG / --
 Language/Info	 Audio / Lang I/II
 Language/Info	 Info / Angle
 Zoom/List	 Zoom / Size
 Zoom/List	 Smart / List
 Red/Angle	 Red / Netflix / Search
 Red/Angle	 Shift + Info / Angle
 Green/Program	 Green / APP / Repeat
 Green/Program	 Shift + TV/Radio / Program

Original	Replacement
 Yellow/Repeat	 Shift + Green / APP /
 Yellow/Repeat	 Yellow / YouTube / Repeat
 Blue/A-B	 Blue / Prime Video / Random
 Blue/A-B	 Shift + Yellow / YouTube /
 <</Hold	 Shift + Stop /
 <</Hold	 << / Tune-
 >>/Index	 >> / Tune+
 I<</Size	 I<< / Preset-
 I<</Size	 Shift + Zoom /
 >>I/Reveal	 >>I / Preset+
 Subtitle	 Subtitle / EQ
 Title/Subpage	 Shift + Sound / Title
 FAV-	 Shift + Down
 FAV+	 Shift + Up

