



Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu
	Mute		Mute		Source		AV
	P.M.		Options		Up		Up
	S.M.	 + 	Shift + Dual		Right		Right
	Zoom		Eject		Down		Down
	1		1		Left		Left
	2		2		OK		Ok
	3		3		Exit / PVR List		Exit
	4		4		Info		Info
	5		5		3D		3D
	6		6		Vol +		Vol +
	7		7		Vol -		Vol -
	8		8		I/II / Nicam		Dual
	9		9		Sleep		Sleep
	0		0		PR +		Ch +
	Return		Back		PR -		Ch -
	CHN. List / Quick		List		Subtitle		Subt





Original	Replacement	Original	Replacement
EPG	Guide	>>I / Sub Page	>>I
Fav	Pre Ch	Red	Red
Text	Text	Green	Green
Rec	Rec	Yellow	Yellow
Play/Pause / Index	Play	Blue	Blue
Play/Pause / Index	Shift + Info		
Play/Pause / Index	Pause		
Stop / Cancel	Shift + Exit		
Stop / Cancel	Stop		
Freeze / Hold	Shift + Pause		
I<< / Size	Shift + Eject		
I<< / Size	I<<		
<< / Reveal	Smart		
<< / Reveal	<<		
>> / Mix	Shift + Text		
>> / Mix	>>		
>>I / Sub Page	Shift + Subt		

