 

 

 

 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 


 


 


 
 
 
 

 



 





 
 
 
 
 
 

 



 
 

 

 
 





 
 
 
 

 
 
 









Original	Replacement
 Power	 Power
 Eject/Auto	 Eject
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -

Original	Replacement
 Aspect	 Format
 Audio	 Dual
 CH+	 Ch +
 CH-	 Ch -
 Display	 Info
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 LCD Menu	 Menu
 DVD Setup/Exit	 Exit
 DVD Setup/Exit	 Options
 Input	 AV
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep





Original		Replacement	
	FAV	 + 	Shift + Pre Ch
	FAV-	 + 	Shift + Ch -
	FAV+	 + 	Shift + Ch +
	EPG		Guide
	Angle/Text	 	Text
	Zoom/Hold	 + 	Shift + Eject
	Tv/Radio	 	TV/R
	Goto/Subpage	 	3D
	D.Disp/Reveal	 	List
	Subtitle	 	Subt
	Title/Size	 	Smart
	D.Menu/Index	 	D. Menu
	I>/Media	 	Media
	Play/Pause		Play
	<<		<<
	Play/Pause		Pause
	>>		>>

Original		Replacement	
	Rec		Rec
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Red/Prog		Red
	Green/Intro		Green
	Yellow/Repeat		Yellow
	Blue/A-B		Blue

