
 








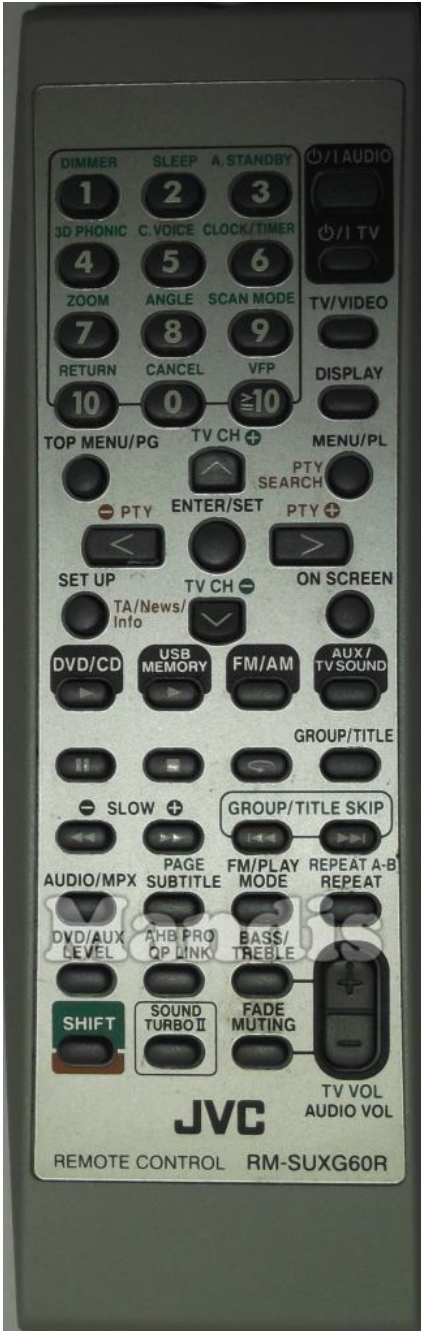




































 










 

























 










Original	Replacement	Original	Replacement
Power Audio	Power	Top Menu/PG	D.Menu / Top
Fade Muting	Mute / Dimmer	Setup	Setup / OPT /
Play /DVD/CD	Play / Slow	AHB PRO	Text / Goto
Pause	Pause / Step / Freeze	On Screen	AV / Input / RDS
Stop	Stop / Hold	Menu/PL	Menu / Home
<< Slow-	<< / Tune-	Up	Up
>> Slow+	>> / Tune+	TA/News/Info	Info / Angle
I<<	I<< / Preset-	Left	Left
>>I	>>I / Preset+	Enter/Set	OK
Sound Turbo II	Sound / Title	Right	Right
Audio/MPX	Audio / Lang I/II	Cancel	Exit / Cancel / Clear
Subtitle	Subtitle / EQ	Down	Down
Scan Mode	Eject / Surround	Back	Back / Return
Bass/Treble	Picture / Format	Audio Vol+	Vol+
Zoom	Zoom / Size	QP Link	Smart / List
Sleep	Sleep / Timer	PTY+	CH+ / Page+
TV/Video	TV/Radio /	Audio Vol-	Vol-






Original	Replacement	Original	Replacement
 Display	 Display / Media	 3D Phonic	 Blue / Prime Video / Random
 PTY-	 CH- / Page-	 Power TV	 Shift + Power
 1	 1	 Dimmer	 Shift + Mute / Dimmer
 2	 2	 Play/USB	 Shift + Play /
 3	 3	 Group/Title Skip I<<	 Shift + I<< / Preset-
 4	 4	 Group/Title Skip >>I	 Shift + >>I / Preset+
 5	 5	 Group/Title	 Shift + Sound / Title
 6	 6	 C.Voice	 Shift + Audio / Lang I/II
 7	 7	 VFP	 Shift + Subtitle / EQ
 8	 8	 Clock/Timer	 Shift + Sleep / Timer
 9	 9	 FM/Play Mode	 Shift + TV/Radio / Program
 10	 Guide / EPG / -/--	 Page	 Shift + D.Menu / Top Menu
 0	 0	 Angle	 Shift + Info / Angle
 >10	 Fav / Marker / PC	 Return	 Shift + Back / Return
 PTY Search	 Red / Netflix / Search	 TV Vol+	 Shift + Vol+
 Repeat	 Green / APP / Repeat	 A.Standby	 Shift + Smart / List
 Repeat A-B	 Yellow / YouTube / Repeat	 TV CH+	 Shift + CH+ / Page+

Original	Replacement	Original	Replacement
 3D Phonic	 Blue / Prime Video / Random	 Power TV	 Shift + Power
 Dimmer	 Shift + Mute / Dimmer	 Play/USB	 Shift + Play /
 Group/Title Skip I<<	 Shift + I<< / Preset-	 Group/Title Skip >>I	 Shift + >>I / Preset+
 Group/Title	 Shift + Sound / Title	 C.Voice	 Shift + Audio / Lang I/II
 VFP	 Shift + Subtitle / EQ	 Clock/Timer	 Shift + Sleep / Timer
 FM/Play Mode	 Shift + TV/Radio / Program	 Page	 Shift + D.Menu / Top Menu
 Angle	 Shift + Info / Angle	 Return	 Shift + Back / Return
 TV Vol+	 Shift + Vol+	 A.Standby	 Shift + Smart / List
 TV CH+	 Shift + CH+ / Page+		



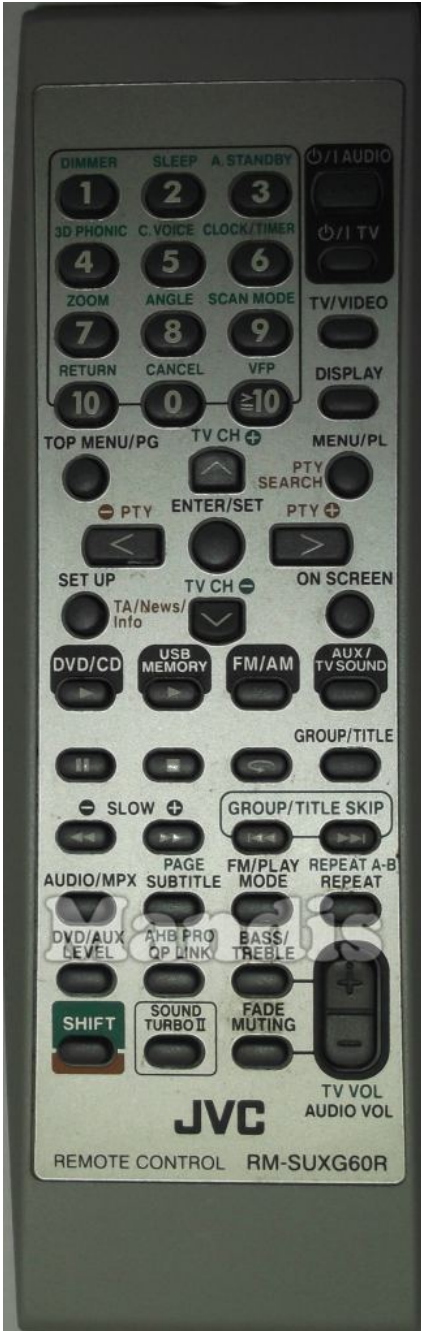

Original	Replacement	Original	Replacement
	Shift + Vol-		
	Shift + CH- /		
	Shift + 2		
	Shift + 6		
	Shift + 7		

