




 

 











 

 
 

 

 



 
 



 



 

 





 








 


 

 

 

 

 



 


Original	Replacement	Original	Replacement
	Power		Power
	[i]/Info		Info
	HDMI Control		Options
	Sleep		Sleep
	Screen		Format
	Source		AV
	Presets		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Return		Back
	0		0
	Menu		Menu
	Red/Zoom		Red
	Green/Repeat		Green
	Yellow/Root		Yellow
	Blue/Title		Blue
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Ok/Selct		Ok
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	FAV		Pre Ch
	Lang		Dual





Original	Replacement
	 Subt
	 Mute
	 Smart
	 Guide
	 D. Menu
	 Text
	 Media
	 Shift + Info
	 Eject
	 TV/R
	 Rec
	 Stop
	 Play
	 Pause
	 <<<
	 >>>
	 I<<<

Original	Replacement
	 >>>

