



Original	Replacement	Original	Replacement
	Power		Power
	Eco		3D
	Dimmer		Smart
	Clock/Timer		AV
	Sleep		Sleep
	Auto Stby		Exit
	1/Mark		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10		Guide
	>10		Pre Ch
	Set		Menu
	Cancel		Back
	Title/Del		Subt
	Disp/Chara		Info
	Play/Pause CD		Play
	Play/Pause USB Memory		Pause
	Tuner		TV/R
	Audio In		Dual
	PTY/Presets/Group		Up
	PTY/Presets/Group Down		Down
	>>		>>
	<<		<<
	Stop		Stop
	Bass/Treble +		Ch +
	Bass/Treble -		Ch -
	Bass/Treble		Format





Original	Replacement	Original	Replacement
	Vol+		Vol +
	Vol-		Vol -
	Fade Muting		Mute
	Audio In Level		Green
	((·))		Yellow
	AHB PRO		D. Menu
	Sound Turbo		Options
	Tuner Mode		Red
	Random/PTY		Media
	Repeat/TA/News/I		Text
	Program		Shift + Sleep

