




 







Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 i	 Info / Angle
 0	 0
 Standard	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Replacement
 Blue	 Blue / Prime Video / Random
 AV	 AV / Input / RDS
 P+	 CH+ / Page+
 Up	 Up
 Down	 Down
 Menu	 Menu / Home
 Left	 Left
 Vol-	 Vol-
 Right	 Right
 Vol+	 Vol+
 P-	 CH- / Page-
 Hold	 Shift + Stop /
 [?]	 Picture / Format
 [♦]	 Zoom / Size
 [≡]	 Text / Goto
 Timer	 Sleep / Timer
 [X]	 D.Menu / Top



Menu



	Original	Replacement		Original	Replacement
	[=i]	 Setup / OPT /			
	Up VCR	 >>I / Preset+			
	<< VCR	 << / Tune-			
	Play VCR	 Play / Slow			
	>> VCR	 >> / Tune+			
	Down VCR	 I<< / Preset-			
	Rec VCR	 Rec / Rec Mode			
	Stop VCR	 Stop / Hold			
	Power VCR	 Shift +  Shift + Power			

	Original	Replacement		Original	Replacement

