 


 

 
 



 

 
 
 
 
 
 
 
 




 



 

 

 
 




Original	Replacement
 1	 1
 AUX	 AV
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7/P	 7
 8	 8
 9	 9
 0	 0
 10/Return	 Shift + Guide
 +10/+100	 Pre Ch
 Play/TA/News/Info	 Play
 Pause/PTY Search	 Pause
 Stop/Display	 Stop
 >>I/PTY+	 >>I

Original	Replacement
 I<</PTY-	 I<<
 FM/AM	 Smart
 FM Mode	 Media
 Pause FM/AM	 Ok
 Play FM/AM	 Up
 Stop FM/AM	 Down
 >>I FM/AM	 Right
 I<<FM/AM	 Left
 Test	 Options
 Effect	 Dual
 Level- SURR L	 Vol -
 Level+ SURR L	 Vol +
 1 FM/AM	 Shift + 1
 2 FM/AM	 Shift + 2
 3 FM/AM	 Shift + 3
 4 FM/AM	 Shift + 4
 5 FM/AM	 Shift + 5





Original	Replacement
6 FM/AM	+ Shift + 6
7 FM/AM	+ Shift + 7
8 FM/AM	+ Shift + 8
9 FM/AM	+ Shift + 9
10 FM/AM	Guide
+10 FM/AM	+ Shift + Pre Ch
Level+ SURR R	Ch +
Level- SURR R	Ch -
Level+ Center	>>
Level- Center	<<
Level+ SUBWFR	TV/R
Level- SUBWFR	3D
Level+ Front L	Green
Level- Front L	Red
Level+ Front R	Blue
Level- Front R	Yellow

Original	Replacement

 







 

 




 
 



 








 



















 

 
 






 




 







	Original	Replacement		Original	Replacement
	Up		Up		
	Down		Down		
	Right		Right		
	Left		Left		
	Enter		Ok		
	Menu		Menu		
	Pause/PTY Search		Pause		
	Play/TA/News/Info		Play		
	Stop/Display		Stop		
	I<</PTY-		I<<		
	>>I/PTY+		>>I		
	Play VCR		2		
	Pause VCR		5		
	Stop VCR		8		
	>>I VCR		6		
	I<< VCR		4		
	Rec Pause VCR		Rec		







Original	Replacement
 Audio Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7/P	 7
 Tv CH+	 Ch +
 Tv CH-	 Ch -
 VCR CH+	 Shift + Ch +
 VCR CH-	 Shift + Ch -
 TV Standby	 Red
 VCR Standby	 Green
 DVD Standby	 Yellow
 Play/TA/News/Info	 Play
 Pause/PTY Search	 Pause

Original	Replacement
 Stop/Display	 Stop
 Sleep	 Sleep
 >>I/PTY+	 >>I
 I<</PTY-	 I<<
 Tv/Video	 TV/R
 Analog/Digital	 Media
 Dimmer	 3D
 Surround	 Dual
 DSP	 AV
 Surround DSP	 Subt
 Vol+	 Vol +
 Vol-	 Vol -
 Tv Vol+	 Right
 Tv Vol-	 Left
 Muting	 Mute
 VCR	 Back
 FM/AM	 Options





	Original	Replacement
	FM/Mode	 Text

	Original	Replacement





Original	Replacement	Original	Replacement
Rec Pause	Rec	10 TV Sound	Guide
Pause	Pause	+10 TV Sound	Pre Ch
Stop	Stop		
Play	Play		
>>	>>		
<<	<<		
TV Sound	Smart		
1 TV Sound	1		
2 TV Sound	2		
3 TV Sound	3		
4 TV Sound	4		
5 TV Sound	5		
6 TV Sound	6		
7 TV Sound	7		
8 TV Sound	8		
9 TV Sound	9		
0 TV Sound	0		

Original	Replacement
10 TV Sound	Guide
+10 TV Sound	Pre Ch

