

 


 



 
 






 

 
 


 

 

 

 




 


Original	Replacement
 Standby DVD	 Power
 Standby	 Shift + Power
 Tv AV/Video	 TV/R
 TV Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AUX	 0
 Cancel	 Exit
 Memo/Mark	 Pre Ch
 Tv Vol+	 Vol +

Original	Replacement
 Tv Vol-	 Vol -
 PR+	 Ch +
 PR-	 Ch -
 ShowView/Video	 Smart
 Prog/Check	 Sleep
 SAT Timer	 Media
 Timer	 AV
 Top Menu	 Shift + Menu
 Navigation	 List
 Menu	 Menu
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 I<<	 I<<

 


 


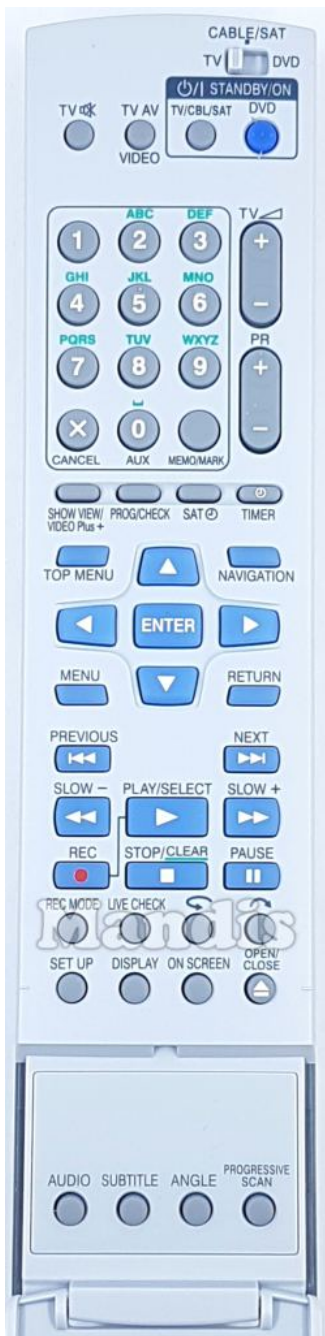

 




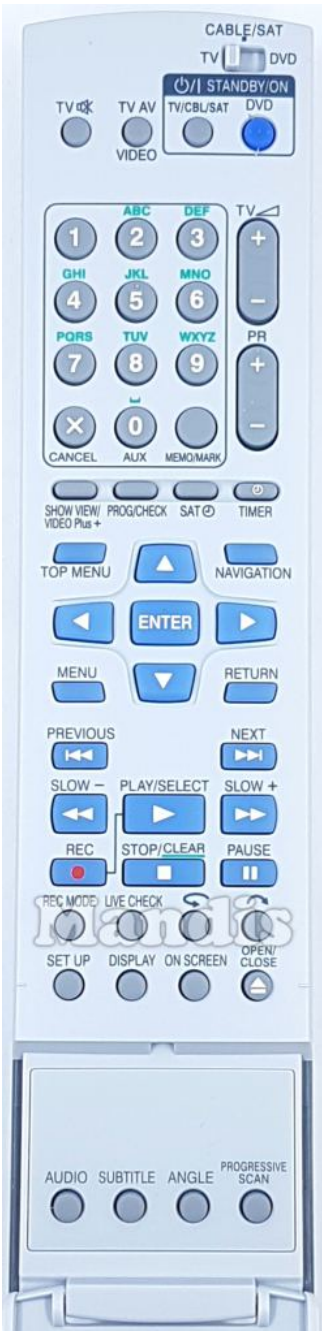








 
 




 



 







 






Original	Replacement
NEXT >>I	>>I
SLOW - <</Slow-	<<
PLAY/SELECT Play/Select	PLAY MODE Play
SLOW + >>/Slow+	>>
REC Rec	REC MODE Rec
STOP/CLEAR Stop/Clear	Stop
PAUSE Pause	Pause
REC MODE Rec Mode	SHIFT + REC MODE Shift + Rec
LIVE CHECK Live Check	REPEAT TEXT Text
← Yellow	C Yellow
→ Blue	D Blue
SET UP Set Up	SETTINGS OPT Options
ON SCREEN On Screen	ECO 3D 3D
DISPLAY Display	DISPLAY INFO Info
OPEN/CLOSE Open/Close	ZOOM Eject
AUDIO Audio	SOUND DUAL Dual
SUBTITLE Subtitle	AD SUBT Subt

Original	Replacement
ANGLE Angle	E-MANUAL D.MENU D. Menu
PROGRESSIVE SCAN Progressive Scan	PICTURE FORMAT Format

 




Original	Replacement
 Standby	 Power
 Standby DVD	 Shift + Power
 Mute	 Mute
 Tv/AV/Video	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 PR+	 Ch +
 PR-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0	 0
 Cancel	 Back
 Timer	 AV
 Show View/Video Plus	 Smart



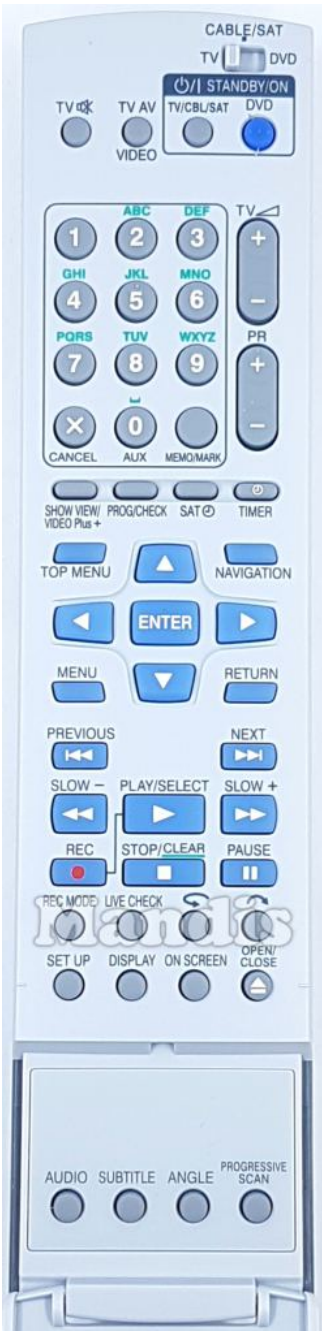

	Original	Replacement	Original	Replacement
	Standby			Power
	Standby DVD			Shift + Power
	1			1
	2			2
	3			3
	4			4
	5			5
	6			6
	7			7
	8			8
	9			9
	0			0
	PR+			Ch +
	PR-			Ch -
	Tv Vol+			Vol +
	Tv Vol-			Vol -
	Tv Mute			Mute

