


 


 

 




 

 

 

Original	Replacement
	Power
	Mute
	P.Mode
	S.Mode
	FAV
	Sleep
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Shift + Guide / EPG / -/-
	0

Original	Replacement
	Back / Return
	Vol+
	Smart / List
	CH+ / Page+
	Vol-
	Shift + Picture / Format
	CH- / Page-
	Guide / EPG / -/-
	Audio / Lang I/II
	Rec / Rec Mode
	Menu / Home
	Up
	Exit / Cancel / Clear
	Left
	OK
	Right
	AV / Input / RDS





Original	Replacement
 Down	 Down
 Display	 Display / Media
 Red	 Red / Netflix / Search
 <<	 << / Tune-
 Green	 Green / APP / Repeat
 >>	 >> / Tune+
 Yellow	 Yellow / YouTube / Repeat
 I<<	 I<< / Preset-
 Blue	 Blue / Prime Video / Random
 >>I	 >>I / Preset+
 Text	 Text / Goto
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Index	 Info / Angle
 Size	 Zoom / Size
 Reveal	 D.Menu / Top

Original	Replacement
 Hold	 Shift + Stop /
 Subpage	 Eject / Surround
 Subtitle	 Subtitle / EQ

