

 













 





 



 












Original	Replacement
 Standby/On	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 >10	 Guide / EPG / -/--
 Clock/Timer	 Shift + Sleep / Timer
 Set/Resume	 Menu / Home
 Cancel	 Exit / Cancel / Clear
 Display	 Display / Media
MP3 Mode	Picture / Format

Original	Replacement
 Preset Up	 >>  / Preset+
 Preset Down	  << / Preset-
 >>/>>	 >> / Tune+
  <</<<	 << / Tune-
 Stop	 Stop / Hold
 Play/Pause CD	 Play / Slow
 FM/AM	 Fav / Marker / PC
 Play/Pause USB Memory	 Pause / Step / Freeze
 AUX	 AV / Input / RDS
 TA/News/Info	 Info / Angle
 Display Mode	 Setup / OPT /
 PTY Search	 Red / Netflix / Search
 PTY+	 CH+ / Page+
 PTY-	 CH- / Page-
 QP Link	 Smart / List
 FM Mode	 TV/Radio /
Repeat	Green / APP / Repeat





Original		Replacement	
PROGRAM	Program	SHIFT + PROGRAM TV/RADIO	Shift + TV/Radio / Program
RANDOM	Random	Prime Video RANDOM	Blue / Prime Video / Random
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
A.STANDBY	A.Standby	TOP MENU D.MENU	D.Menu / Top
DIMMER	Dimmer	SHIFT + DIMMER MUTE	Shift + Mute / Dimmer
SOUND TURBO	Sound Turbo	TITLE SOUND	Sound / Title
AHB PRO	AHB Pro	EQ SUBTITLE	Subtitle / EQ
BASS/TREBLE	Bass/Treble	LANG I/II AUDIO	Audio / Lang I/II
[Volume Up]	Vol+	+ VOL	Vol+
[Volume Down]	Vol-	- VOL	Vol-
FADE MUTING	Fade Muting	DIMMER MUTE	Mute / Dimmer

Original		Replacement	

