













 









 







 




Original	Replacement
Power Audio	Power
Tv Direct	Shift + 0
Power DVR/DVD	Red / Netflix / Search
Power VCR	Green / APP / Repeat
Power STB	Yellow / YouTube / Repeat
Power Tv	Blue / Prime Video / Random
DVR/DVD	Fav / Marker / PC
VCR	Shift + 4
Video	Shift + 5
TV	Shift + 1
DVD Multi	Guide / EPG / -/--
FM/AM	Shift + 6
Tv/Video	TV/Radio /
Muting	Mute / Dimmer
Vol+	Vol+
Vol-	Vol-
Channel+	Shift + Audio / Lang I/II

Original	Replacement
Channel-	Shift + Setup / OPT / Tools
Tv Vol+	Shift + Vol+
Tv Vol-	Shift + Vol-
I<</Tuning-	I<< / Preset-
Play/FM Mode	Play / Slow
>>I/Tuning+	>>I / Preset+
<<	<< / Tune-
Stop/Memory	Stop / Hold
Pause	Pause / Step / Freeze
>>	>> / Tune+
Menu	Menu / Home
Top Menu/STB	D.Menu / Top
Smart Surround Setup	Sound / Title
On	Picture / Format
Up/TA/News/Inf	Up
Down/PTY	Down
Right/PTY+	Right







Original	Replacement
 Left/PTY-	 Left
 Enter	 OK
 fsIRate/Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 SetUp	 Setup / OPT /
 DVD/HDD/Title/Gr	 Shift + 2
 Zoom/→	 Zoom / Size
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 ←	 Back / Return
 VFP/Progressive	 Smart / List
 Angle	 Info / Angle
 Ex/Es/Return	 Shift + Back / Return
 Cancel	 Exit / Cancel / Clear
 DVD Card/Rec	 Rec / Rec Mode
 Rec Pause	 Shift + Pause / Step /
 Surround	 Eject / Surround
 Display/Dimmer	 Display / Media
 Input Analog/Digital	 AV / Input / RDS
 L-Front+/Thumbn	 Shift + Up
 L-Front-	 Shift + Down
 Front-R+/Slide	 Shift + Right
 Front-R-	 Shift + Left
 Center+/3D/S	 CH+ / Page+
 Center-	 CH- / Page-
 Page+/Subwfr+	 Shift + CH+ / Page+

































 
 


Original	Replacement
 Power DVD	 Power
 Power Audio	 Shift + Power
 Muting	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 I<<	 I<< / Preset-
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Menu	 Menu / Home
 Top Menu/STB	 D.Menu / Top
 On Screen	 Picture / Format
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Left	 Left
 Enter	 OK
 fs/Rate/Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Set Up	 Setup / OPT /
 DVD/HDD/Title/Gr	 Blue / Prime Video / Random
 Zoom/→	 Zoom / Size
 ←	 Back / Return
 VFP/Progressive	 Smart / List
 Angle	 Info / Angle
 EX/Es/Return	 Shift + Back / Return
 Cancel	 Exit / Cancel / Clear
 DVD Card/Rec	 Rec / Rec Mode
 1	 1
 2	 2
 3	 3





Original	Replacement	Original	Replacement
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10		Guide / EPG / -/--
	+10		Fav / Marker / PC
	Surround		Eject / Surround
	Display/Dimmer		Display / Media
	Input Analog/Digital		AV / Input / RDS
	Thumbnail		Yellow / YouTube / Repeat
	Slide		Text / Goto
	3D/S Effect		Sound / Title
	Page+		CH+ / Page+





Original	Replacement
 Power Audio	 Power
 FM/AM	 TV/Radio /
 Muting	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 I<</Tuning-	 I<< / Preset-
 Play/FM Mode	 Play / Slow
 >>I/Tuning+	 >>I / Preset+
 Stop/Memory	 Stop / Hold
 Up/TA7News/Inf	 Up
 Down/PTY	 Down
 Right/PTY+	 Right
 Left/PTY-	 Left
 On	 Picture / Format
 Smart Surround Setup	 Smart / List
 1 FM/AM	 1
 2 FM/AM	 2

Original	Replacement
 3 FM/AM	 3
 4 FM/AM	 4
 5 FM/AM	 5
 6 FM/AM	 6
 7 FM/AM	 7
 8 FM/AM	 8
 9 FM/AM	 9
 10 FM/AM	 0
 +10 FM/AM	 Fav / Marker / PC
 EX/ES/Return	 Back / Return
 Display/Dimmer	 Display / Media
 Decode	 Shift + 2
 EQ Freq	 Shift + 3
 Bass Boost	 Shift + 4
 C.Tone	 Shift + 5
 EQ Level+	 Shift + 6
 Midnight	 Shift + 7



