



Original	Replacement	Original	Replacement
Power Audio	Power	Menu/PL	Menu / Home
Power Tv	Shift + Power	Top Menu/PG	D.Menu / Top
1	1	On Screen	Display / Media
2	2	Play	Play / Slow
3	3	Stop	Stop / Hold
5	5	Pause	Pause / Step / Freeze
4	4	Back/Tuner/Play Mode	Back / Return
6	6	I<<	I<< / Preset-
7	7	>>I	>>I / Preset+
8	8	<<	<< / Tune-
9	9	>>	>> / Tune+
0	0	Play/Pause	Red / Netflix / Search
10	Guide / EPG / -/--	Play/Pause USB	Shift + Play /
+10	Fav / Marker / PC	Play/Pause	Shift + Yellow / YouTube /
Audio Vol+	Vol+	Play/Pause Bluetooth	Blue / Prime Video / Random
Audio Vol-	Vol-	Audio/MPX	Audio / Lang I/II
Fade Muting	Mute / Dimmer	Subtitle	Subtitle / EQ





Original	Replacement
Zoom	Zoom / Size
Audio In	Shift + Display / Media
File Type	Text / Goto
Repeat	Green / APP / Repeat
VFP/Scan Mode	AV / Input / RDS
3D Phonic/HP	TV/Radio /
C.Voice	Shift + Setup / OPT / Tools
DVD Audio In	Shift + Sound / Title
My Sound	Picture / Format
Sound Mode	Sound / Title
Subwoofer Level+	CH+ / Page+
V.Bass	Shift + Audio / Lang I/II
Subwoofer Level-	CH- / Page-
Repeat A-B	Yellow / YouTube / Repeat
Cancel	Exit / Cancel / Clear
Set Up	Setup / OPT /
Return	Shift + Back / Return

Original	Replacement
Angle	Info / Angle
Tv Vol+	Shift + Right
Tv Vol-	Shift + Left
Enter/Set	OK
Up	Up
Down	Down
Right	Right
Left	Left
Sleep	Sleep / Timer
A.STBY	Shift + 0
Clock/Timer	Shift + Sleep / Timer
MIC Vol+	Shift + Up
MIC Vol-	Shift + Down
Karaoke Setting	Smart / List
Mic Mix	Shift + Smart / List
TV Channel+	Shift + CH+ /
Vocal Masking	Eject / Surround





Original	Replacement	Original	Replacement
TV Channel-	SHIFT + CH PAGE		Shift + CH- /
Karaoke Scoring	SHIFT + RDS AV INPUT		Shift + AV / Input / RDS
Reserve	SHIFT + SIZE ZOOM		Shift + Zoom /
Title/Edit/Bluetooth Setting	SHIFT + TV 1		Shift + 1
Level Meter	SHIFT + DVD 2		Shift + 2
Motion Sensor	SHIFT + CD - STB 3		Shift + 3
Vocal Support	SHIFT + EQ SUBTITLE		Shift + Subtitle / EQ
Display/Chara	SHIFT + VIDEO 4		Shift + 4
Eco Dimmer	SHIFT + TAPE 5		Shift + 5
Tv/Video	SHIFT + TUNER 6		Shift + 6
Group Title >>	SHIFT + BLUETOOTH 9		Shift + 9
Group Title Skip >>	SHIFT + USB 8		Shift + 8
<< Group Title Skip	SHIFT + AUX - HDD 7		Shift + 7
Rec Mode	REC MODE		Rec / Rec Mode
Title Search	SHIFT + OK		Shift + OK

Original	Replacement

