






 


 
 







 



 



 

 

 

 
 
 

 
 
 

 

 

 

 




 


 

 





 








Original		Replacement		Original		Replacement	
	View DVD		Smart		Timer		Shift + AV
	View VCR		Media		F.ADV / Step		Pre Ch
	TV / VCR		TV/R		I<<		I<<
	Input SEL.		AV		Rec		Rec
	Standby / On		Power		Speed		Sleep
	Open / Close		Eject		>>I		>>I
	Info		Info		<<		<<
	1		1		Stop		Stop
	2		2		Play		Play
	3		3		Pause		Pause
	4		4		>>		>>
	5		5		TRK +		Vol +
	6		6		TRK -		Vol -
	7		7		Audio		Dual
	8		8		Prog +		Ch +
	9		9		Prog -		Ch -
	0		0		Menu		Menu





Original		Replacement	
	Return		Back
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Disc Menu		D. Menu
	Clear		Exit
	Zoom		Shift + Eject
	EZ View		Options
	Subtitle		Subt
	Angle / IPC		Format
	Mode / Repeat		Text
	Mark / Search		Shift + TV/R

Original		Replacement	

