 











Original	Replacement
 Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV / STB	 AV / Input / RDS
 0	 0
 TV / Radio	 TV/Radio /
 CH +	 CH + / Page+
 Mute	 Mute / Dimmer
 Vol +	 Vol+
 CH -	 CH- / Page-

Original	Replacement
 Pause	 Pause / Step / Freeze
 Vol -	 Vol-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Red / SUB-T	 Subtitle / EQ
 Red / SUB-T	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow / Timer	 Yellow / YouTube / Repeat
 Blue / Info	 Blue / Prime Video / Random
 Blue / Info	 Info / Angle
 P.STD	 Picture / Format
 P.Size	 Zoom / Size





	Original	Replacement	
	A L/R	SOUND	Sound / Title
	Text	GOTO TEXT	Text / Goto
	Recall	RETURN BACK	Back / Return
	Recall	PC FAV MARKER	Fav / Marker / PC
	EPG	-/- GUIDE EPG	Guide / EPG / -/-
	A.Lang	LANG I/II AUDIO	Audio / Lang I/II
	Sleep	TIMER SLEEP	Sleep / Timer

	Original	Replacement	

