






Original	Replacement	Original	Replacement
	Power		Power
	Tv/AV		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Back		Back / Return
	Vol+		Vol+
	Scan		Smart / List
	P+		CH+ / Page+

Original	Replacement	Original	Replacement
	Vol-		Vol-
	Zoom		Zoom / Size
	P-		CH- / Page-
	Up		Up
	Left		Left
	OK/Select		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Mute		Mute / Dimmer
	Red / Picture		Red / Netflix / Search
	Red / Picture		Picture / Format
	Green / Sound		Green / APP / Repeat
	Green / Sound		Sound / Title
	Yellow / Sleep		Yellow / YouTube / Repeat
	Yellow / Sleep		Sleep / Timer
	Blue / Call		Blue / Prime Video / Random





	Original	Replacement	Original	Replacement
	Text	 Text / Goto		
	Mix	 +  Shift + Text /		
	Size	 +  Shift + Zoom /		
	Index	 Rec / Rec Mode		
	Hold	 Stop / Hold		
	Reveal	 Play / Slow		
	Subpage	 Subtitle / EQ		
	Cancel	 Exit / Cancel / Clear		
	DVB Menu	 D.Menu / Top		
	i	 Info / Angle		
	EPG	 Guide / EPG / -/--		
	ESC	 Fav / Marker / PC		
	DVB	 Display / Media		
	Freeze	 Pause / Step / Freeze		
	I/II	 Audio / Lang I/II		

