 






 

 
 


 


 


 
 






 
 
 




 



 
 


 



 


 




 


 
 


 
 


 
 





Original	Replacement	Original	Replacement
 Power	 Power	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 Up	 Up
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Right	 Right
 6	 6	 Down	 Down
 7	 7	 Red	 Red
 8	 8	 Green	 Green
 9	 9	 Yellow	 Yellow
 0	 0	 Blue	 Blue
 Source	 AV	 Vol+	 Vol +
 TV/Radio	 TV/R	 Vol-	 Vol -
 Info	 Info	 Fav	 Pre Ch
 Menu	 Menu	 Opt	 Options
 Back	 Back	 CH+ / Page+	 Ch +
 Media	 Media	 CH- / Page-	 Ch -





Original		Replacement		Original		Replacement	
	Rec		Rec				
	Play/Pause		Play				
	Play/Pause		Pause				
	Stop		Stop				
	V-Format		Format				
	I<<		I<<				
	>>I		>>I				
	<<		<<				
	>>		>>				
	[≡] Text		Text				
	[≡□] / Audio		Dual				
	[≡↑] / S.Mode		Shift + Dual				
	[≡?] / PIP		Smart				
	[≡X] / SUB		Subt				
	[≡i] / P.Mode		Shift + Format				
	[≡/] / Sleep		Sleep				

