

 

 





 







 











 

 

 

 





 

 









 



 







 





Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 Open/Close	 Eject / Surround	 Vol+ Tv	 Vol+
 Power Tv	 Shift + Power	 Tv/DVD	 Smart / List
 DVD	 Shift + 2	 0	 0
 HDD	 Shift + 7	 Mute Tv	 Mute / Dimmer
 AV	 AV / Input / RDS	 Vol- Tv	 Vol-
 Av Tv	 Shift + AV / Input / RDS	 Display	 Display / Media
 1	 1	 Text	 Text / Goto
 2	 2	 Tv/Radio	 TV/Radio /
 3	 3	 Rec	 Rec / Rec Mode
 PR+ Tv	 CH+ / Page+	 Zoom	 Zoom / Size
 4	 4	 Repeat	 Shift + Green / APP /
 5	 5	 << / Tune-	 << / Tune-
 6	 6	 >> / Tune+	 >> / Tune+
 PR- Tv	 CH- / Page-	 I<< / Preset-	 I<< / Preset-
 7	 7	 >>I / Preset+	 >>I / Preset+
 8	 8	 Pause/Step	 Pause / Step / Freeze





Original	Replacement
	Play / Slow
	Stop / Hold
	Menu / Home
	Up
	D.Menu / Top
	Left
	OK
	Right
	Guide / EPG / -/--
	Down
	Back / Return
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Fav / Marker / PC
	Shift + Red / Netflix / Search

Original	Replacement
	Audio / Lang I/II
	Exit / Cancel / Clear
	Sound / Title
	Setup / OPT /
	Shift + Blue / Prime
	Subtitle / EQ
	Picture / Format

