









 

















 









 

 



 

 
 
 


 

 
 
 

 

 
 

 









 



 

Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Open/Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Clear	 Shift + Exit / Cancel / Clear
 0	 0
 Repeat/Tv/Radi	 Shift + Green / APP /
 I<<	 I<< / Preset-
 <<	 << / Tune-

Original	Replacement
 >>	 >> / Tune+
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause/Timeshift	 Pause / Step / Freeze
 Guide	 Guide / EPG / -/-
 PR+	 CH+ / Page+
 Rec	 Rec / Rec Mode
 PR List	 Smart / List
 PR-	 CH- / Page-
 Timer Rec	 Sleep / Timer
 Home	 Menu / Home
 Music ID	 Display / Media
 Info/Display	 Info / Angle
 Up	 Up
 Left	 Left
 Enter	 OK





Original	Replacement
 Right	 Right
 Down	 Down
 Return	 Back / Return
 Title/Pop Up	 Sound / Title
 Disc Menu/Rec.	 D.Menu / Top
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Marker	 Fav / Marker / PC
 Search	 Shift + Red / Netflix / Search
 Zoom	 Zoom / Size
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 Exit	 Exit / Cancel / Clear
 Power Tv	 Shift + Power
 Vol+ Tv	 Vol+

Original	Replacement
 PR+ TV	 Shift + CH+ /
 AV/Input Tv	 AV / Input / RDS
 Vol- Tv	 Vol-
 PR- TV	 Shift + CH- /

