

 



 
 
 

 



 



 

 

 
 
 
 
 

 
 
 

 






Original	Replacement
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit
 Repeat	 Text
 Menu Disc	 Menu
 Menu/Info	 Info
 Home	 Smart

Original	Replacement
 Title/popup	 Media
 Back	 Back
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Play	 Play
 Stop	 Stop
 Pause	 Pause
 <<	 <<
 >>	 >>
 <<	 <<
 >>	 >>
 Subtitle	 Subt
 Red	 Red
 Green	 Green





Original	Replacement	Original	Replacement
 Yellow	 Yellow		
 Blue	 Blue		
 Audio	 Dual		
 *	 Options		
 Power Tv	 Shift + Power		
 Vol+ Tv	 Vol +		
 Vol- Tv	 Vol -		
 PR/CH+ Tv	 Ch +		
 PR/CH- Tv	 Ch -		
 AV Input Tv	 AV		
 Mute Tv	 Mute		

Original	Replacement	Original	Replacement

