

 
 





 




 
 





| Original | Replacement |
|------------|--------------------------|
| Power | Power |
| Power Tv | Shift + Power |
| Input | AV / Input / RDS |
| Mute | Mute / Dimmer |
| Open/Close | Eject / Surround |
| Input Tv | Shift + AV / Input / RDS |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| Vol+ Tv | Shift + Vol+ |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| Vol- Tv | Shift + Vol- |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |

| Original | Replacement |
|------------------|---------------------------|
| Vol+ | Vol+ |
| Rec List/Disc | D.Menu / Top |
| 0 | 0 |
| Q.Menu/Title | Shift + D.Menu / Top Menu |
| Vol- | Vol- |
| << | << / Tune- |
| >> | >> / Tune+ |
| I<< | I<< / Preset- |
| >>I | >>I / Preset+ |
| Pause/Time Shift | Pause / Step / Freeze |
| Play | Play / Slow |
| Stop | Stop / Hold |
| Home | Menu / Home |
| Up | Up |
| Info/Menu | Info / Angle |
| Left | Left |
| Enter | OK |





| Original | Replacement |
|---|---|
|  |  Right |
|  |  Back / Return |
|  |  Down |
|  |  Exit / Cancel / Clear |
|  |  Smart / List |
|  |  CH- / Page- |
|  |  CH+ / Page+ |
|  |  Fav / Marker / PC |
|  |  Red / Netflix / Search |
|  |  Green / APP / Repeat |
|  |  Yellow / YouTube / Repeat |
|  |  Blue / Prime Video / Random |
|  |  Guide / EPG / -/-- |
|  |  Text / Goto |
|  |  Shift + Rec / Rec Mode |
|  |  Rec / Rec Mode |
|  |  TV/Radio / |

| Original | Replacement |
|---|---|
|  |  Subtitle / EQ |



t Program