 




 



 

 


 



 









 

 







Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0
 Vol+	 Vol+
 Mute/AD	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 P-	 CH- / Page-

Original	Replacement
 Home/Recent	 Menu / Home
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 Wheel Up	 >>  / Preset+
 Right	 Right
 OK	 OK
 Wheel Down	  << / Preset-
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 3D	 Picture / Format
 Source	 AV / Input / RDS
 *	 D.Menu / Top
 Text	 Text / Goto
 T.Opt	 Setup / OPT /
 Play	 Play / Slow





Original		Replacement		Original		Replacement	
	Pause		Pause / Step / Freeze				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

