



Original		Replacement		Original		Replacement	
	Power		Power		Clear		Shift + Exit / Cancel / Clear
	Tv Power		Shift + Power		0		0
	Open/Close		Eject / Surround		Recall/Repeat/Tv/ Radio		TV/Radio /
	Tv Mute		Shift + Mute / Dimmer		Vol- Tv		Vol-
	AV/Input Tv		AV / Input / RDS		<<		<< / Tune-
	1		1		>>		>> / Tune+
	2		2		I<<		I<< / Preset-
	3		3		>>I		>>I / Preset+
	PR/CH+ Tv		Shift + CH+ /		Pause/Time Shift		Pause / Step / Freeze
	4		4		Play		Play / Slow
	5		5		Stop		Stop / Hold
	6		6		Home		Menu / Home
	PR/CH- Tv		Shift + CH- /		Up		Up
	7		7		Info/Menu		Info / Angle
	8		8		Left		Left
	9		9		Enter		OK
	Vol+ Tv		Vol+		Right		Right



