



Original	Replacement	Original	Replacement
Power	Power	Vol+ Tv	Shift + Vol+
Power Tv	Shift + Power	Rec	Rec / Rec Mode
Tv/PVR	TV/Radio /	0	0
Vol-	Vol-	Timeshift	Setup / OPT /
Vol+	Vol+	Vol- Tv	Shift + Vol-
Av Input Tv	AV / Input / RDS	<< Scan	<< / Tune-
1	1	Scan >>	>> / Tune+
2	2	I<< Skip	I<< / Preset-
3	3	Skip >>I	>>I / Preset+
PR/CH+ Tv	Shift + CH+ /	Pause	Pause / Step / Freeze
4	4	Play	Play / Slow
5	5	Stop	Stop / Hold
6	6	Home	Menu / Home
PR/CH- Tv	Shift + CH- /	Guide	Guide / EPG / -/-
7	7	Up	Up
8	8	Left	Left
9	9	OK	OK





Original	Replacement		
	Right		Right
	Back		Back / Return
	Down		Down
	i/Info		Info / Angle
	PR-		CH- / Page-
	PR+		CH+ / Page+
	Page Down		Shift + Down
	Page Up		Shift + Up
	Red/Repeat		Red / Netflix / Search
	Green/Zoom		Green / APP / Repeat
	Yellow/Marker		Yellow / YouTube / Repeat
	Blue/Edit		Blue / Prime Video / Random
	PR List		Smart / List
	FAV		Fav / Marker / PC
	O)/Audio		Audio / Lang I/II
	[...]/Subtitle		Subtitle / EQ
	Time Rec		Sleep / Timer

Original	Replacement		
	Text		Text / Goto
	Goto		Shift + Text /
	Resolution		Picture / Format

