




 







 







 



 

 











 



 

 

 



 






 
 
 

 


 
 





Original	Replacement	Original	Replacement
 Power	 Power	 Home	 Menu
 1	 1	 *	 Options
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 Wheel Up	 >>
 8	 8	 Wheel Down	  <<
 9	 9	 Back	 Back
 0	 0	 Guide	 Guide
 List	 List	 Netflix	 Smart
 Mute	 Mute	 Prime Video	 Shift + Smart
 Vol+	 Vol +	 Red	 Red
 Vol-	 Vol -	 Movies	 Media
 CH+	 Ch +	 Green	 Green
 CH-	 Ch -	 Yellow	 Yellow





Original	Replacement	Original	Replacement
	Blue		Blue
	Play		Play
	Pause		Pause
	Input		AV

