 










 

 


 
 
 
 

 
 



 
 
 
 

 
 

 




Original	Replacement
 Power	 Power
 TV	 Shift + 1
 Caption	 Subtitle / EQ
 AV Mode	 Eject / Surround
 [] / Ratio	 TV / Radio /
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0

Original	Replacement
 Flashbk	 Text / Goto
 Vol+	 Vol+
 FAV	 Fav / Marker / PC
 CH/Page-	 CH- / Page-
 CH/Page+	 CH+ / Page+
 Vol-	 Vol-
 Audio	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 Picture	 Picture / Format
 Info	 Info / Angle
 Sound	 Sound / Title
 Settings	 Setup / OPT /
 Up	 Up
 Q.Menu	 D.Menu / Top
 Left	 Left
 OK	 OK
 Right	 Right





	Original	Replacement		Original	Replacement
		Back / Return			
		Down			
		Exit / Cancel / Clear			
		Display / Media			
		Sleep / Timer			
		Stop / Hold			
		<< / Tune-			
		Play / Slow			
		Pause / Step / Freeze			
		>> / Tune+			
		Red / Netflix / Search			
		Green / APP / Repeat			
		Yellow / YouTube / Repeat			
		Blue / Prime Video / Random			

