































 




 








 










 




 
 











 

 

 






Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol+
 Energy Saving	 Sleep / Timer	 FAV/Mark/Char/Nu	 Fav / Marker / PC
 AV Mode	 Picture / Format	 P+	 CH+ / Page+
 Input	 AV / Input / RDS	 Vol-	 Vol-
 Tv/Rad	 TV/Radio /	 3D	 Zoom / Size
 1	 1	 Mute/Delete	 Mute / Dimmer
 2	 2	 P-	 CH- / Page-
 3	 3	 Menu	 Menu / Home
 4	 4	 NetCast	 Sound / Title
 5	 5	 Q.Menu	 D.Menu / Top
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 OK	 OK
 9	 9	 Right	 Right
 List	 Smart / List	 Down	 Down
 0	 0	 Exit	 Exit / Cancel / Clear
 Q.Vlew	 Setup / OPT /	 Back	 Back / Return





Original	Replacement	Original	Replacement
 GUIDE	Guide	 GUIDE EPG	Guide / EPG / -/--
 Red	Red	 NETFLIX SEARCH	Red / Netflix / Search
 Green	Green	 APP REPEAT	Green / APP / Repeat
 Yellow	Yellow	 YouTube REPEAT A-B	Yellow / YouTube / Repeat
 L/R SELECT	Blue/L/R/Select	 Prime Video RANDOM	Blue / Prime Video / Random
 TEXT	Text	 GOTO TEXT	Text / Goto
 T.OPT	T.Opt	 SHIFT + OPT-TOOLS SETUP	Shift + Setup / OPT / Tools
 SUBTITLE	Subtitle	 EQ SUBTITLE	Subtitle / EQ
 Stop	Stop	 HOLD	Stop / Hold
 Play	Play	 SLOW	Play / Slow
 Pause	Pause	 STEP-FREEZE	Pause / Step / Freeze
 <<	<<	 TUNE-	<< / Tune-
 >>	>>	 TUNE+	>> / Tune+
 SIMPLINK	Simplink	 MEDIA DISPLAY	Display / Media
 INFO	Info	 ANGLE INFO	Info / Angle
 AD	AD	 LANG I/II AUDIO	Audio / Lang I/II
 APP/*	APP/*	 SHIFT + APP REPEAT	Shift + Green / APP / Repeat

