 

 

 

 





 
 

 




 
 
 
 
 
 








 

 
 
 
 
 







 
 

 


| Original | Replacement |
|---|---|
|  Standby |  Power |
|  USB |  SRC |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0/10 |  0 |
|  10+ |  -/- / EPG |
|  Time |  P/C / FAV |
|  SUB/MP3 |  MEDIA |
|  Angle |  Red (A) |
|  Audio |  Audio |

| Original | Replacement |
|---|--|
|  Mute |  MUTE |
|  Menu |  MENU |
|  Setup |  VOD |
|  Up |  UP |
|  Down |  DOWN |
|  Left |  LEFT |
|  Right |  RIGHT |
|  Enter |  OK |
|  Title |  TV/R |
|  L/R |  Green (B) |
|  << |  Rewind |
|  >> |  Fast Forward |
|  Play |  Play |
|  Pause |  Pause |
|  PBC |  Yellow (C) |
|  Stop |  Stop |
|  I<< |  First |





| Original | Replacement | Original | Replacement |
|---|---|----------|-------------|
|  >> |  Last | | |
|  Vol- |  VOL - | | |
|  Vol+ |  VOL + | | |
|  V-MODE |  V-FOR | | |
|  Repeat |  TEXT | | |
|  N/P |  Blue (D) | | |
|  Clear |  EXIT | | |
|  Prog |  OPT+ | | |
|  A-B |  Shift + VOD | | |
|  Zoom |  WIDE | | |
|  Slow |  CH + | | |
|  Random |  CH - | | |
|  Return |  BACK | | |
|  Display |  INFO | | |
|  Step |  Subt. | | |
| | | | |
| | | | |

