



Original	Replacement	Original	Replacement
 Power	 Power	 Exit	 Exit
 Mute	 Mute	 Display	 Shift + Info
 1	 1	 Enter	 Ok
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Left	 Left
 5	 5	 Right	 Right
 6	 6	 Vol+	 Vol +
 7	 7	 Vol-	 Vol -
 8	 8	 CH+	 Ch +
 9	 9	 CH-	 Ch -
 0	 0	 FAV/List	 Dual
 Recall	 Pre Ch	 Freeze	 Options
 Source	 AV	 Tv/Radio	 TV/R
 Menu	 Menu	 Rec	 Rec
 P.Mode	 Shift + Format	 Red	 Red
 S.Mode	 Shift + Dual	 Green	 Green





Original	Replacement	Original	Replacement
 Yellow	 Yellow		
 Cyan	 Blue		
 <</Guide	 <<		
 >>/Aspect	 >>		
 <</Cancel	 +  Shift + Subt		
 >>/Sub.Pg	 Back		
 Stop/Index	 Stop		
 Play/Pause/Time Shift	 Play		
 Subtitle	 Subt		
 Text	 Text		
 Reveal	 +  Shift + Options		
 Size	 Format		
 Hold	 Eject		
 DTV/ATV	 Info		
 Rec List	 D. Menu		
 Sleep	 Sleep		
 MTS	 +  Shift + Sleep		

Original	Replacement	Original	Replacement

