



 

 
 
 
 
 
 
 


 





 





 

 


 
 
 





 
 

 

 











 

 













 

 



Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 Timer/□□	 Sleep / Timer
 []/T-C	 Picture / Format
 Audio/Repeat	 Shift + Green / APP / REPEAT
 Audio/Repeat	 Audio / Lang I/II
 [+]/Eye/SV	 Display / Media
 →[]←/Disc Menu/SP/LP	 D.Menu / Top
 Radio/Search/000	 Shift + Red / Netflix / SEARCH
 Radio/Search/000	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Replacement
 8	 8
 9	 9
 */EPG	 Guide / EPG / -/--
 0/AV	 AV / Input / RDS
 0/AV	 0
 #/PIP	 Smart / List
 Menu	 Menu / Home
 End	 Exit / Cancel / Clear
 Text	 Text / Goto
 Info	 Info / Angle
 P+	 CH+ / Page+
 Vol-	 Vol-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+





 









 

 


 

 

 

 




 



Original	Replacement	Original	Replacement
	Down		Down
	P-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold





Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 Timer/□□	 Sleep / Timer
 []/T-C	 Picture / Format
 [+]/Eye/SV	 Display / Media
 →[]-/Disc Menu/SP/LP	 D.Menu / Top
 Radio/Search/000	 Shift + Red / Netflix / Search
 Radio/Search/000	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0/AV	 AV / Input / RDS
 0/AV	 0
 Menu	 Menu / Home
 End	 Exit / Cancel / Clear
 Text	 Text / Goto
 Info	 Info / Angle
 P+	 CH+ / Page+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 P-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
















 
 



 

 
 
 



 

 







 



 

 



 

 

 

 

 

 

 











Original		Replacement	
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold

Original		Replacement	





Original	Replacement
	 Mute / Dimmer
	 Power
	 Sleep / Timer
	 Picture / Format
	 Green / APP / Repeat
	 Audio / Lang I/II
	 Display / Media
	 D.Menu / Top
	 Red / Netflix / Search
	 TV/Radio /
	 1
	 2
	 3
	 4
	 5
	 6
	 7

Original	Replacement
	 8
	 9
	 0
	 AV / Input / RDS
	 Menu / Home
	 Exit / Cancel / Clear
	 Info / Angle
	 CH+ / Page+
	 Up
	 Left
	 OK
	 Right
	 Down
	 CH- / Page-
	 << / Tune-
	 Play / Slow
	 >> / Tune+





Original	Replacement
	Rec / Rec Mode
	Pause / Step / Freeze
	Stop / Hold

Original	Replacement

