 











 

 
 







Original	Replacement
	Power
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Setup / OPT /
	Info / Angle
	Up
	Left
	OK
	Right
	Down
	Menu / Home
	Text / Goto
	Vol+
	CH+ / Page+
	Vol-

Original	Replacement
	Mute / Dimmer
	CH- / Page-
	1
	2
	3
	4
	5
	6
	7
	8
	9
	AV / Input / RDS
	0
	Back / Return
	Smart / List
	D.Menu / Top
	<< / Tune-



[illegible]