


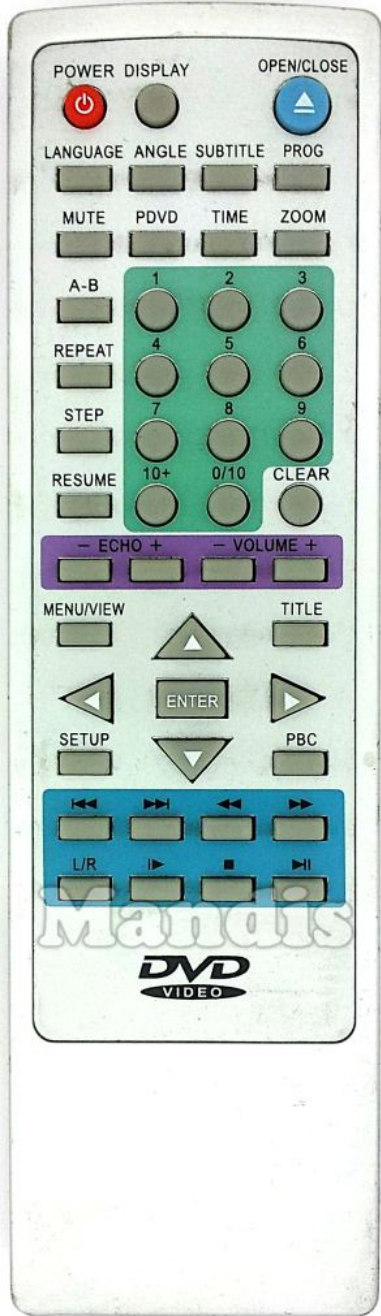






 












| Original | Replacement |
|------------|---------------------------|
| Power | Power |
| Display | Display / Media |
| Open/Close | Eject / Surround |
| Language | Audio / Lang I/II |
| Angle | Info / Angle |
| Subtitle | Subtitle / EQ |
| Prog | TV/Radio / |
| Mute | Mute / Dimmer |
| PDVD | AV / Input / RDS |
| Time | Sleep / Timer |
| Zoom | Zoom / Size |
| A-B | Yellow / YouTube / Repeat |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| Repeat | Green / APP / Repeat |
| 4 | 4 |

| Original | Replacement |
|-----------|------------------------|
| 5 | 5 |
| 6 | 6 |
| Step | Shift + Pause / Step / |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| Resume | Smart / List |
| 10+ | Guide / EPG / -/- |
| 0/10 | 0 |
| Clear | Exit / Cancel / Clear |
| Echo- | CH- / Page- |
| Echo+ | CH+ / Page+ |
| Volume- | Vol- |
| Volume+ | Vol+ |
| Menu/View | Menu / Home |
| Up | Up |
| Title | Sound / Title |





| Original | Replacement | Original | Replacement |
|---|-------------|---|-----------------------|
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Setup |  | Setup / OPT / |
|  | Down |  | Down |
|  | PBC |  | Picture / Format |
|  | I<< |  | I<< / Preset- |
|  | >>I |  | >>I / Preset+ |
|  | << |  | << / Tune- |
|  | >> |  | >> / Tune+ |
|  | L/R |  | Text / Goto |
|  | I> |  | Pause / Step / Freeze |
|  | Stop |  | Stop / Hold |
|  | Play/Pause |  | Play / Slow |
| | | | |
| | | | |
| | | | |

