




 





























 




 

 


 





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Rec		Rec / Rec Mode
	TV Sys.		D.Menu / Top
	Browser		Display / Media
	Copy		Picture / Format
	Music		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Repeat		Shift + Green / APP / Repeat
	0		0
	Info		Info / Angle
	<<		<< / Tune-
	Vol -		Vol-
	Vol +		Vol+
	I<<		I<< / Preset-
	>>		>> / Tune+
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Home		Shift + Menu /
	Up		Up
	Return		Back / Return
	Left		Left
	Enter		OK
	Right		Right





	Original	Replacement	Original	Replacement
	Menu	 Menu / Home		
	Down	 Down		
	Setup	 Setup / OPT /		
	Time Shift	 Sleep / Timer		
	Slow I>	 Shift + Play /		
	A-B	 Shift + YouTube /		
	Goto	 Shift + Text /		
	Zoom	 Zoom / Size		
	Audio	 Audio / Lang I/II		
	Subtitle	 Subtitle / EQ		
	Angle	 Shift + Info / Angle		
	Red	 Red / Netflix / Search		
	Green / EPG	 Green / APP / Repeat		
	Green / EPG	 Guide / EPG / -/--		
	Yellow / Text	 Text / Goto		
	Yellow / Text	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		

