

 


 

 




 

 
 
 






 
 


 



 
 


 
 
 
 


 
 
 
 
 
 



 


 

 
 
 
 


 
 








	Original	Replacement	Original	Replacement
	 Power	 Power	 Right / Vol +	 Vol +
	 SUB-T	 Subt	 Left / Vol -	 Left
	 Lang	 Dual	 Left / Vol -	 Vol -
	 Mute	 Mute	 OK	 Ok
	 EPG	 Guide	 FAV	 Pre Ch
	 Goto	 Smart	 TV / Radio	 TV/R
	 Page +	 Shift + Ch +	 Recall	 Back
	 Page -	 Shift + Ch -	 Info	 Info
	 TTX	 Text	 1	 1
	 Repeat	 Shift + Text	 2	 2
	 Menu	 Menu	 3	 3
	 Exit	 Exit	 4	 4
	 Up / CH +	 Up	 5	 5
	 Up / CH +	 Ch +	 6	 6
	 Down / CH -	 Down	 7	 7
	 Down / CH -	 Ch -	 8	 8
	 Right / Vol +	 Right	 9	 9



 
 













 






 


 
 


 
 
 

 


 



 









 

 



 













Original		Replacement		Original		Replacement	
	0		0				
	<<		<<				
	>>		>>				
	l<<		l<<				
	>>l		>>l				
	Play		Play				
	Pause / Timeshift		Pause				
	Stop		Stop				
	Rec		Rec				
	Red / PVR		Red				
	Green / V-Format		Green				
	Green / V-Format		Format				
	Yellow / Aspect		Yellow				
	Yellow / Aspect		3D				
	Blue / Timer		Blue				





 
 


 





Original		Replacement		Original		Replacement	
	Power		Power		OK		Ok
	Mute		Mute		FAV		Pre Ch
	EPG		Guide		TV / Radio		TV/R
	Info		Info		Text		Text
	Audio		Dual		Goto		Smart
	Recall		Back		1		1
	Subtitle		Subt		2		2
	Menu		Menu		3		3
	Exit		Exit		4		4
	Up / CH +		Up		5		5
	Up / CH +		Ch +		6		6
	Down / CH -		Down		7		7
	Down / CH -		Ch -		8		8
	Right / Vol +		Right		9		9
	Right / Vol +		Vol +		0		0
	Left / Vol -		Left		USB		Media
	Left / Vol -		Vol -		Rec		Rec





Original	Replacement	Original	Replacement
 Stop	 Stop		
 Play / Pause	 Play		
 Play / Pause	 Pause		
 <<	 <<		
 >>	 >>		
 <<	 <<		
 >>	 >>		
 ---	 Shift + 1		
 ---	 Shift + 2		
 ---	 Shift + 3		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

