




 



 

 

 














 








 






Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Back / Return
	0		0
	Sleep		Sleep / Timer
			Shift + 1
			Shift + 2
	CH.List		Smart / List
	Source		AV / Input / RDS
	Up		Up
	Audio / Nicam		Audio / Lang I/II
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Vol+		Vol+
	Mouse On/Off		D.Menu / Top
	CH+		CH+ / Page+
	Vol-		Vol-
	Home		Shift + Menu /
	CH-		CH- / Page-
	P.Mode		Picture / Format
	S.Mode		Sound / Title





Original	Replacement	Original	Replacement
 Display	 Display / Media	 Yellow	 Yellow / YouTube / Repeat
 Fav	 Fav / Marker / PC	 Blue	 Blue / Prime Video / Random
 TXT	 Text / Goto		
 Sub / Index	 Subtitle / EQ		
 EPG / S. Page	 Guide / EPG / -/-		
 Size	 Zoom / Size		
 Stop	 Stop / Hold		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 Hold / Aspect	 Setup / OPT /		
 Hold / Aspect	 Shift + Stop /		
 Play / Pause	 Play / Slow		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Reveal / Antena	 TV/Radio /		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		

