


 

 







 

 



 

















 

 






Original	Replacement	Original	Replacement
 Power	 Power	 PR +	 Up
 Mute	 Mute	 PR -	 Ch -
 1	 1	 PR -	 Down
 2	 2	 Vol +	 Vol +
 3	 3	 Vol +	 Right
 4	 4	 Vol -	 Vol -
 5	 5	 Vol -	 Left
 6	 6	 OK	 Ok
 7	 7	 SWAP	 Back
 8	 8	 16:9	 Format
 9	 9	 White / i	 Info
 0	 0	 Red	 Red
 -/--	 GUIDE	 Green	 Green
 AV / TV	 TV/R	 Yellow	 Yellow
 Menu	 Menu	 Blue	 Blue
 TXT	 Text	 Stop	 Stop
 PR +	 Ch +	 Reveal	 Smart

Original	Replacement	Original	Replacement
 PR +	 Up	 TV	 AUX
 PR -	 Ch -	 DVD	 SAT
 PR -	 Down	 SLEEP	 REC MODE
 Vol +	 Vol +	 DISC NAV	 PLAY MODE
 Vol +	 Right	 LIST	 DUAL
 Vol -	 Vol -	 SOUND	 AD
 Vol -	 Left	 SETTINGS	 SUBT
 OK	 Ok	 OPT	 ECO
 SWAP	 Back	 PROG	 PICTURE
 16:9	 Format	 SLEEP	 3D
 White / i	 Info	 E-MANUAL	 TIMER
 Red	 Red	 D.MENU	 AV
 Green	 Green	 TOP MENU	 DISPLAY INFO
 Yellow	 Yellow	 MENU	 OK
 Blue	 Blue	 CLEAR	 RETURN BACK
 Stop	 Stop	 EXIT	 BACK
 Reveal	 Smart	 HOME	 + VOL





Original	Replacement	Original	Replacement
 Double	 Media		
 SUB	 Subt		
 MIX	 Shift + Text		
 Update	 Eject		

