



Original	Replacement
	 Power
	 Mute / Dimmer
	 Shift + Audio / Lang I/II
	 Shift + Picture / Format
	 Picture / Format
	 Sound / Title
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Shift + Guide / EPG / -/--
	 0

Original	Replacement
	 Back / Return
	 Display / Media
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Sleep / Timer
	 Up
	 AV / Input / RDS
	 Left
	 OK
	 Right
	 Down
	 Menu / Home
	 Exit / Cancel / Clear





Original		Replacement		Original		Replacement	
	CH+		CH+ / Page+		DTV		Smart / List
	Subtitle		Subtitle / EQ		EPG		Guide / EPG / -/-
	Vol+		Vol+		Tv/Radio		TV/Radio /
	CH-		CH- / Page-				
	T.Shift		Setup / OPT /				
	Vol-		Vol-				
	Play/Pause/Hold		Play / Slow				
	Play/Pause/Hold		Shift +				
	Play/Pause/Hold		Stop /				
	<</Reveal		<< / Tune-				
	>>/Size		Zoom / Size				
	>>/Size		>> / Tune+				
	Stop/Index		Stop / Hold				
	I<<		I<< / Preset-				
	S.Page/>>I		>>I / Preset+				
	Text		Text / Goto				
	FAV		Fav / Marker / PC				
	Audio		Audio / Lang I/II				

