



 







 







 



 



 

 

 


 
 



 



 











 


















Original	Replacement	Original	Replacement
 Sleep	 Sleep / Timer	 Vol+	 Vol+
 On/Standby	 Power	 CH-	 CH- / Page-
 CBL/SAT	 0	 Mute	 Mute / Dimmer
 DVD	 2	 Vol-	 Vol-
 Blu-ray	 4	 Info	 Info / Angle
 Game	 Fav / Marker / PC	 Option	 Shift + Setup / OPT / Tools
 AUX	 7	 Option	 Menu / Home
 Media Player	 Display / Media	 Up	 Up
 TV Audio	 1	 Left	 Left
 CD	 3	 Enter	 OK
 Tuner	 6	 Right	 Right
 iPod/USB	 8	 Back	 Back / Return
 Phono	 Guide / EPG / -/--	 Down	 Down
 M-XPort	 5	 Setup	 Setup / OPT /
 Network	 9	 I<</Tune-	 I<< / Preset-
 Internet Radio	 Smart / List	 I<</Tune-	 << / Tune-
 CH+	 CH+ / Page+	 Play / Pause	 Play / Slow

 

 



 



 

 

 

 

 

 

 





 









Original	Replacement	Original	Replacement
 Play / Pause	 Pause / Step / Freeze		
 >>I/Tune+	 >> / Tune+		
 >>I/Tune+	 >>I / Preset+		
 Favorite Station 1	 Sound / Title		
 Favorite Station 2	 Audio / Lang I/II		
 Favorite Station 3	 Subtitle / EQ		
 Red/Movie	 Red / Netflix / Search		
 Green/Music	 Green / APP / Repeat		
 Blue/Game	 Blue / Prime Video / Random		
 Yellow/Pure	 Yellow / YouTube / Repeat		





Original	Replacement
 Sleep	 Sleep / Timer
 On/Standby	 Power
 CBL/SAT	 0
 DVD	 2
 Blu-ray	 4
 Game	 Fav / Marker / PC
 AUX	 7
 Media Player	 Display / Media
 TV Audio	 1
 CD	 3
 Tuner	 6
 iPod/USB	 8
 Phono	 Guide / EPG / -/-
 M-XPort	 5
 Network	 9
 Internet Radio	 Smart / List
 CH+	 CH+ / Page+

Original	Replacement
 Vol+	 Vol+
 CH-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Option	 Setup / OPT /
 Option	 Menu / Home
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 I<</Tune-	 I<< / Preset-
 I<</Tune-	 << / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 >>I/Tune+	 >>I / Preset+



