



























 

































 

 


 










 





 





 

 



Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 TV	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV/AV	 AV / Input / RDS
 Q.View	 Fav / Marker / PC
 Up	 Up
 Prog+	 CH+ / Page+

Original	Replacement
 Prog-	 CH- / Page-
 Down	 Down
 Right	 Right
 Vol+	 Vol+
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 Menu	 Menu / Home
 Zoom	 Zoom / Size
 I/II	 Audio / Lang I/II
 Info	 Info / Angle
 P.Timer	 Sleep / Timer
 Swap	 Back / Return
 Picture	 Picture / Format
 Timer	 Shift + Sleep / Timer
 Sound	 Sound / Title
 Red	 Red / Netflix / Search





Original	Replacement	Original	Replacement
	Green  Green / APP / Repeat		
	Yellow  Yellow / YouTube / Repeat		
	Blue  Blue / Prime Video / Random		
	Index  Display / Media		
	Hold  Stop / Hold		
	Size  Shift + Zoom /		
	Text  Text / Goto		
	Subtitle  Subtitle / EQ		
	Mix  Shift + Text /		
	Reveal  D.Menu / Top		
	Cancel  Exit / Cancel / Clear		
	Sub Code  Shift + Back / Return		

