





 















 











 











 





 













 





Original		Replacement		Original		Replacement	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		OK		OK
	1		1		Right		Right
	2		2		Home		D.Menu / Top
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Netflix		Shift + Red / Netflix /
	6		6		Vol+		Vol+
	7		7		Info		Info / Angle
	8		8		PR+		CH+ / Page+
	9		9		Vol-		Vol-
	CH List		Smart / List		EPG		Guide / EPG / -/-
	0		0		PR-		CH- / Page-
	Return/Back		Back / Return		Rec		Rec / Rec Mode
	Menu		Menu / Home		Nicom I/II		Audio / Lang I/II
	Up		Up		Text		Text / Goto
	Source		AV / Input / RDS		AD/Subpage		Sound / Title



