 







 

















































 











Original	Replacement	Original	Replacement
 1-2-3 Menu	 TV/Radio /	 OK/Prog	 OK
 Eject	 Eject / Surround	 Data On Screen	 Display / Media
 Encore	 Smart / List	 AV	 AV / Input / RDS
 Power	 Power	 Vol+	 Vol+
 1	 1	 Tv Chanel+	 CH+ / Page+
 2	 2	 Counter Reset	 Back / Return
 3	 3	 Tv Power	 Shift + Power
 Cancel	 Exit / Cancel / Clear	 Vol-	 Vol-
 4	 4	 Tv Channel-	 CH- / Page-
 5	 5	 Play	 Play / Slow
 6	 6	 Stop	 Stop / Hold
 SP/LP	 Setup / OPT /	 Play	 Play / Slow
 7	 7	 Rec	 Rec / Rec Mode
 8	 8	 Menu	 Menu / Home
 9	 9	 Pause	 Pause / Step / Freeze
 -/-	 Guide / EPG / -/-	 <  Shuttle/Index	  << / Preset-
 0	 0		





Original	Replacement	Original	Replacement
 ▼Jog/-	 Down		
 ▲Jog/+	 Up		
 Shuttle/Index  >	 >>  / Preset+		

